

Lebanon United Jobbers

800.422.6397 ext. 3

BiB Instructions

To Open Box:




- Lift flap "A"
- Position Box with Perforation UP
- Lift flap "B"
- Press in circle "A" (use fingers only)

- Slide threaded fitting on bag into position - be sure cardboard is in groove @ base of fitting

- Lock fitting in place with flap "B" (tuck cardboard into groove)

To Replace and Connect BiB:

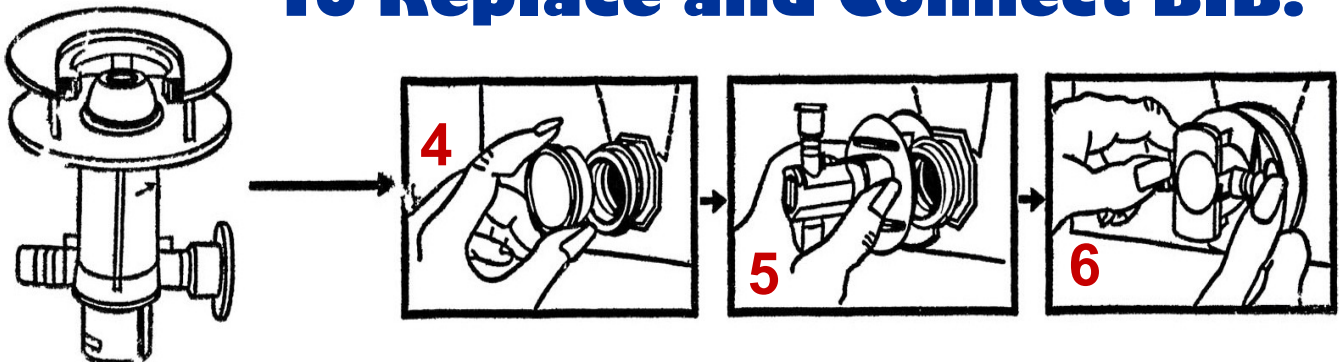

- Remove empty box to floor
- Open the Carton (BiB) see pictures above 1, 2 & 3
- Pull out neck of bag and pop off cap; then place BiB into position (see picture 4 above).
- Disengage Bag Connector from empty BiB by grabbing the hoses on either side and pushing the wings toward the bag - you will hear it 'click' as you do this. Finish by sliding off.
- Place Bag Connector on new BiB by sliding into place and pushing back on the 'center' of the bag connector until it is completely flush in the front (see picture 5 & 6).
- BiB is now operational.

General Information on an Autofill Backup System

The BIB system dispenses the proper proportion of concentrate to water into the backup machine.

The **WATERLINE VALVE** should be turned **ON** during the day and **OFF** at night. The valve is normally on the right side of the BIB system if mounted on a cart, or on a table leg if the BIB system is attached to a table.

The **AUTOFILL CONTROL BOX** is normally mounted on the right side of the backup machine. There is a lighted red switch on the top of the box that must remain **ON** for the machine to fill. The probe plugs in to the top of the box and **MUST REMAIN PLUGGED IN AT ALL TIMES.**

To clean the plastic cover on the top of the machine:

1. Turn the lighted red switch **OFF**.
2. Remove the probe from the plastic cover.
3. Remove the plastic cover.
4. Be careful not to disturb the drive cap at the top center of the machine.
5. Reverse to reassemble.

**Be careful with hoses and connections.
DO NOT pull or stress hoses.
Keep sharp objects away from hoses.**

**Lebanon
United Jobbers
800.422.6397 ext. 3**